

Leica 3D Disto First steps



First steps


This is a quick guide for your first measurement with the Leica 3D Disto.


- Setup
- Connection
- Measuring
- Viewfinder
- Save & Export
- Applications
- Advanced





Leica 3D Disto Setup

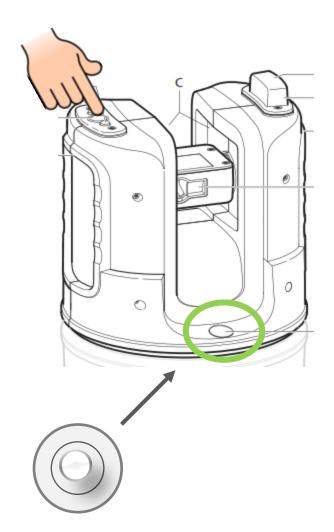

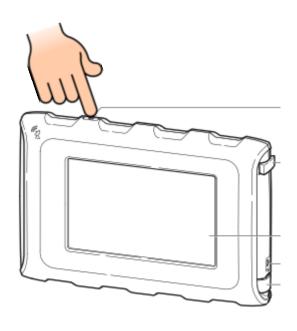


Press red buttons to switch ON...




Setup



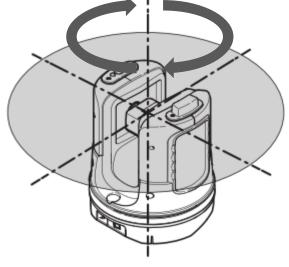



...wait while the 3D Disto is leveling...

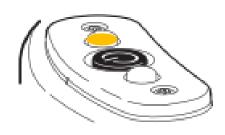



Leica 3D Disto Setup



Connection



...start WiFi connection.

WiFi connection not successful? Try again.

Still without results? Find help in the last chapter.



Connection




green LED flashing



Ready to measure.



Measuring

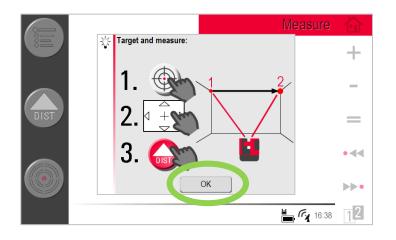

A popup assistant explains how to measure.


Press OK to continue.

You know how to measure?

Go to chapter "Save & Export"




Measuring

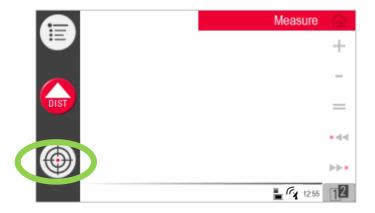

Press the "Viewfinder" key. Camera and laser switch on.




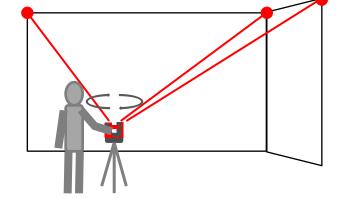


Turn the laser spot to the positions you want to measure and press DIST.



Results

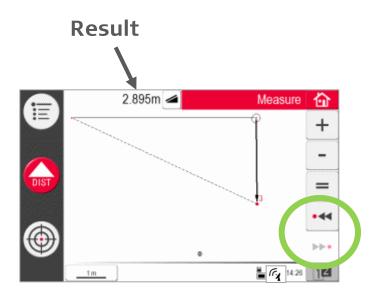

Measured points are connected with a line. Use scroll keys or tip on the sketch to select one. You find more results like angles, tilt, height difference etc. behind this key:

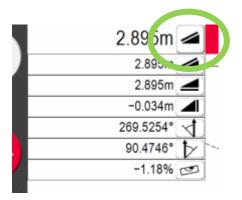



The Viewfinder




The Viewfinder supports precise targeting and makes photos.

See the following pages.




The Viewfinder

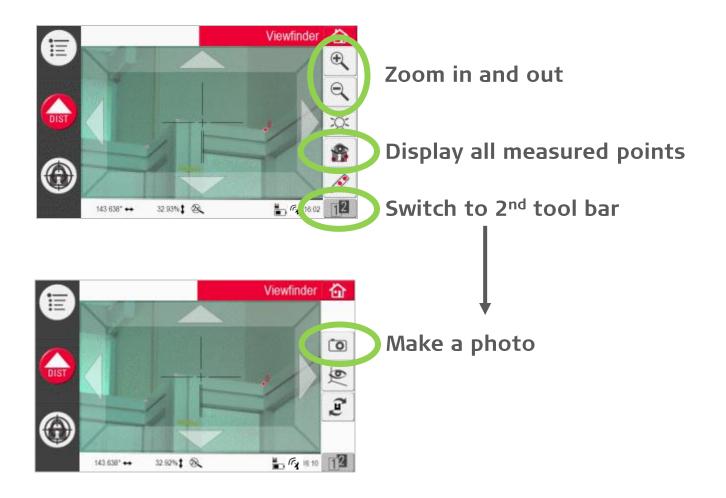




The Viewfinder

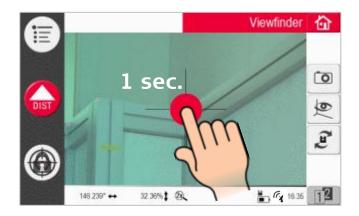

Targeting:


Press on the cross hair's center. A big dot appears

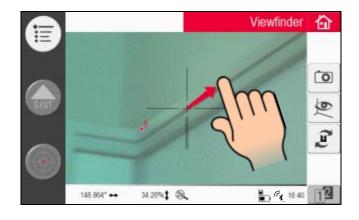

Glide to any direction. The laser follows until you release the screen.



The Viewfinder

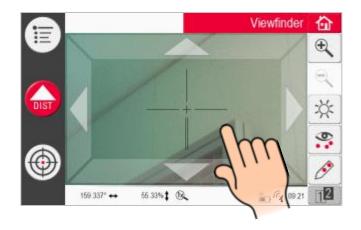

Make a short tip on any position in the image. The laser will go there.



Use the arrow keys for small steps. Zoom in to make steps smaller.




Save & export





Press the HOME key at any time to quit the application.

Press "save as..."

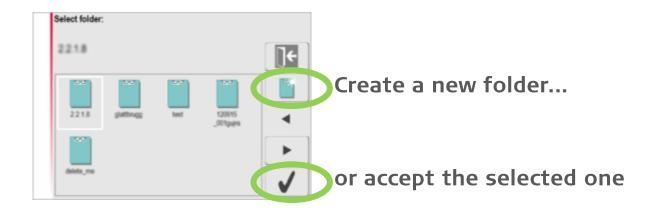




Save & export





Plug the USB stick into the Control Unit.

Start the file manager.

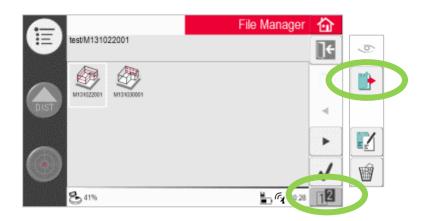


Select a file or a folder.

Press export key.




Save & export (Windows version)

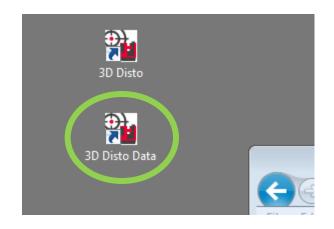

The software version for Windows exports the data to a folder on your desktop.


Tip

Download a free DXF viewer from the internet and check your export data immediately after export.

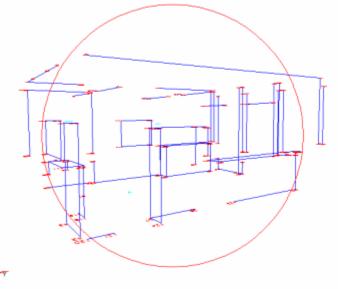



Applications

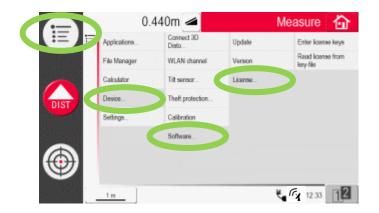

Enter the license keys. You find them on the delivery papers.



Now all applications are offered.


Run the DEMO mode if you want to enter the keys at a later time.



Advanced

Register your 3D Disto on myWorld for:

- warranty extension
- license keys
- training materials
- free software updates
- support
- manuals

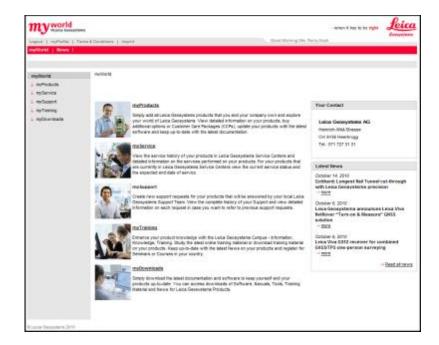

https://myworld.leica-geosystems.com www.3ddisto.com



Advanced

The Windows version is identical to the Control Unit software. It runs on desktop computers, laptops and tablet PCs.



The 3D Disto cooperates with CAD systems. See this example: http://www.plugndraw.com/




Please contact your local dealer.



Advanced



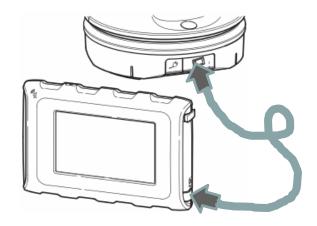

Change the channel if the WiFi connection fails:

Plug USB cable to 3D Disto and Control Unit.

Press the USB key on the start screen or in Menu/Device/Connect 3D Disto








Advanced







Select Menu/Device/WLAN channel and change it:

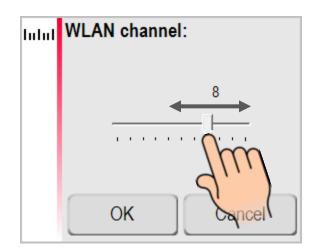

Finally execute Menu/Device/Connect 3D Disto.



Advanced



WiFi connection still not working?

Try other channels. Other devices on the same channel disturb the connection.

Connection problems on Windows PCs can have other reasons. You find details in the README files of the setup package that you have downloaded from myWorld.

www.3ddisto.com

